

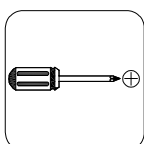
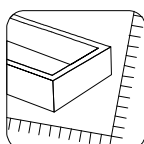
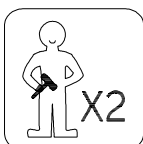
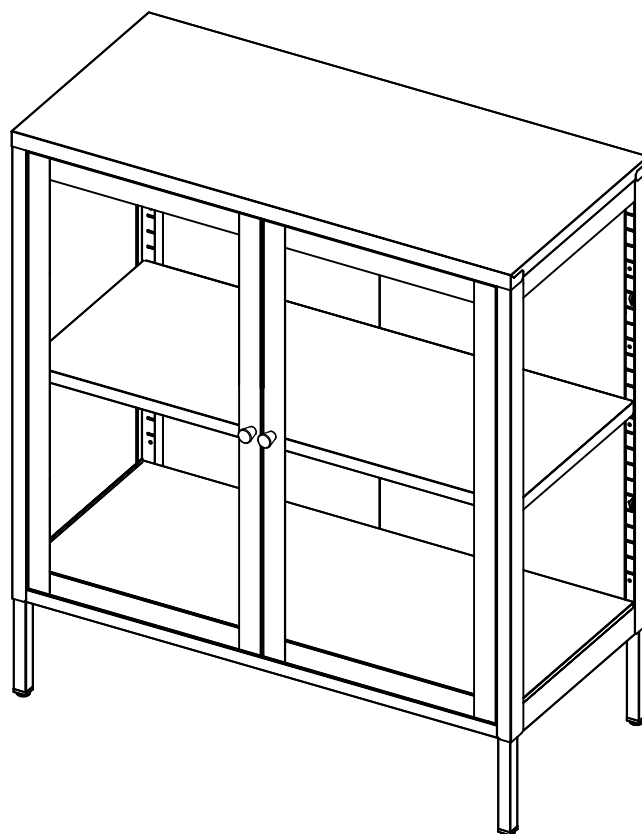


3003016

**HOUSE
NORDIC**



Dalby Cabinet, 2 glass doors, White metal

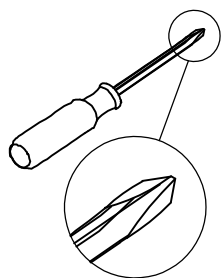

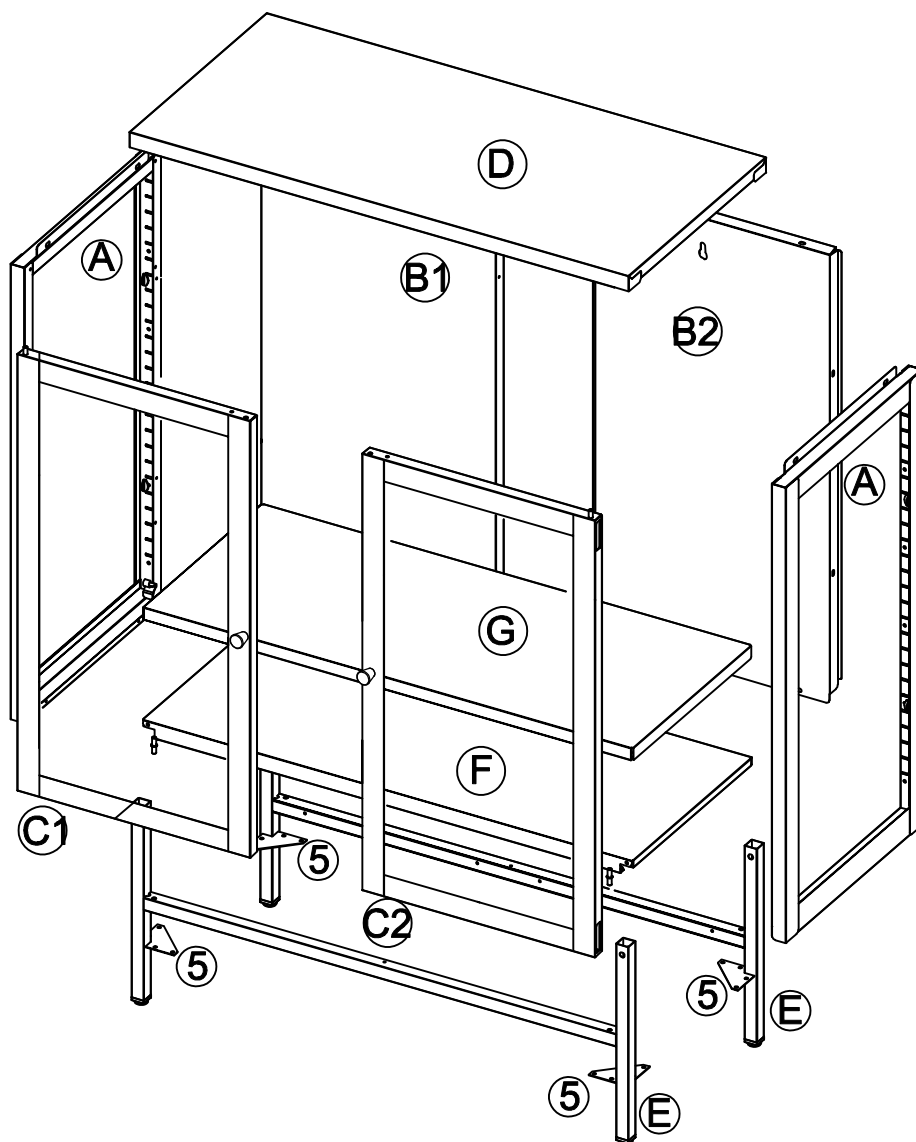


Hardware	Ctn No.	1
----------	---------	---




No.	Size	Qty
A	698x350x24mm	2
B1	669.5x384.5x23mm	1
B2	669.5x380x23mm	1
C1	651x373.5x20mm	1
C2	651x373.5x20mm	1
D	801x351.5x38mm	1
E	265x797x20mm	2
F	786x301x25mm	1
G	786x300x20mm	2

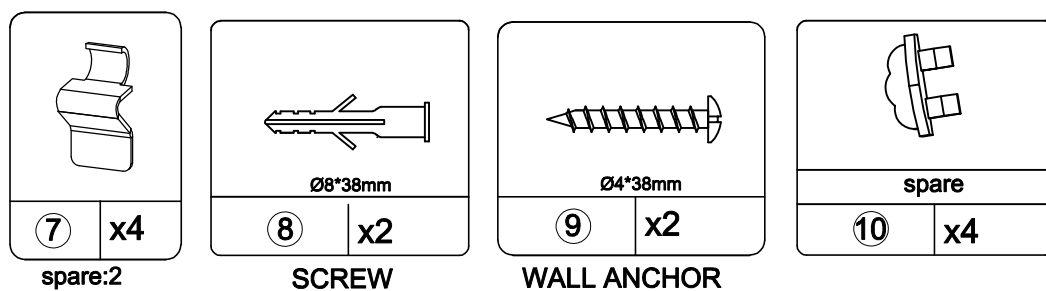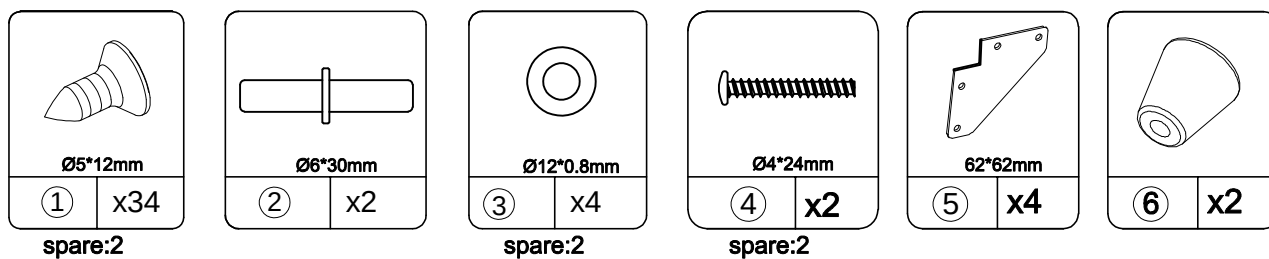



(1) - Attach (A) to (E) as below shown.

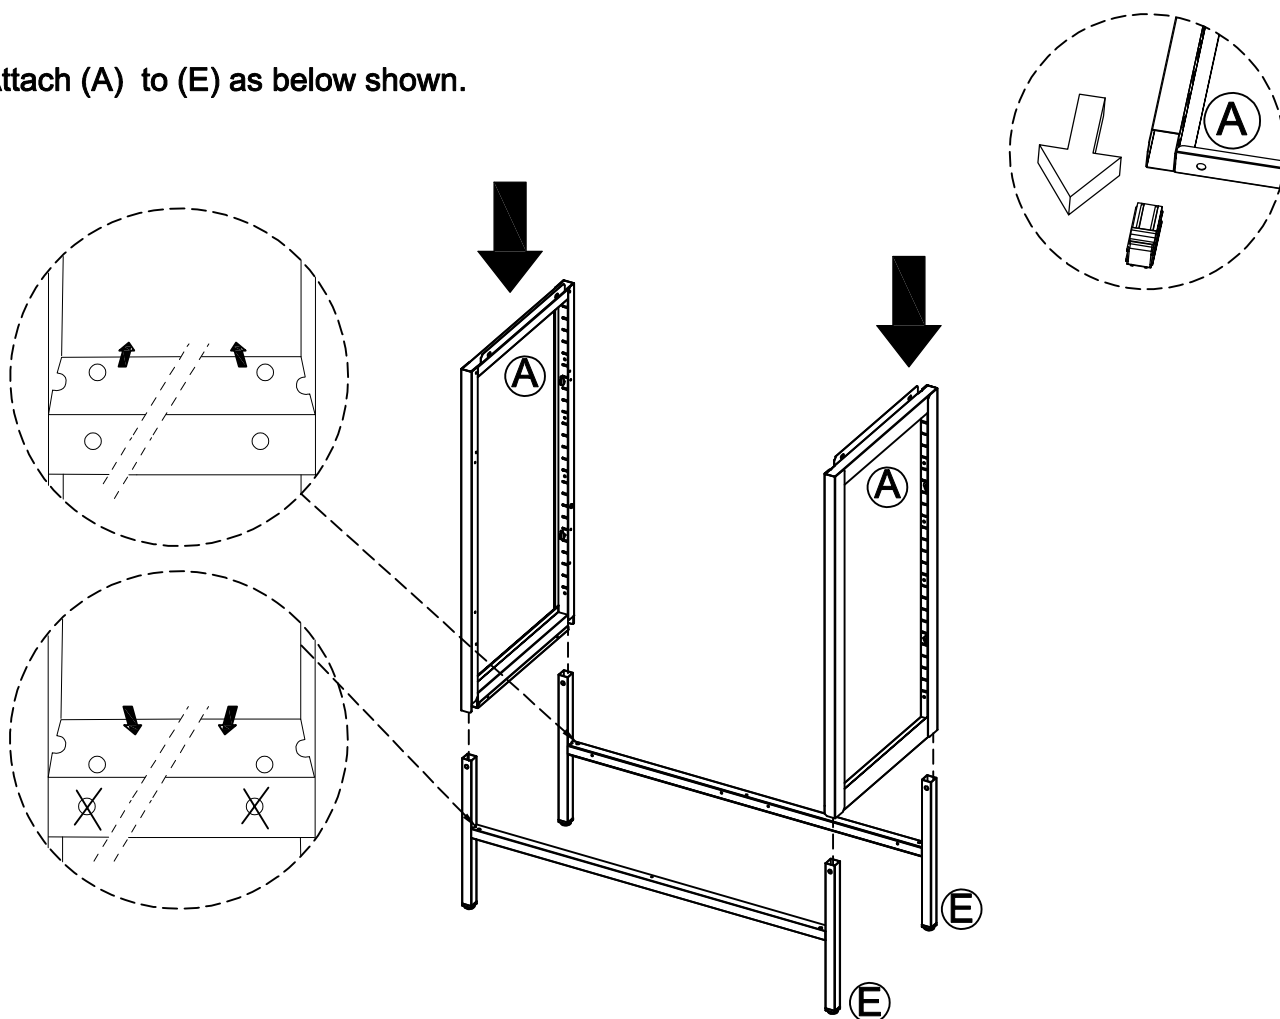




(2) - Attach ⑤ to (A)&(E) as below shown.

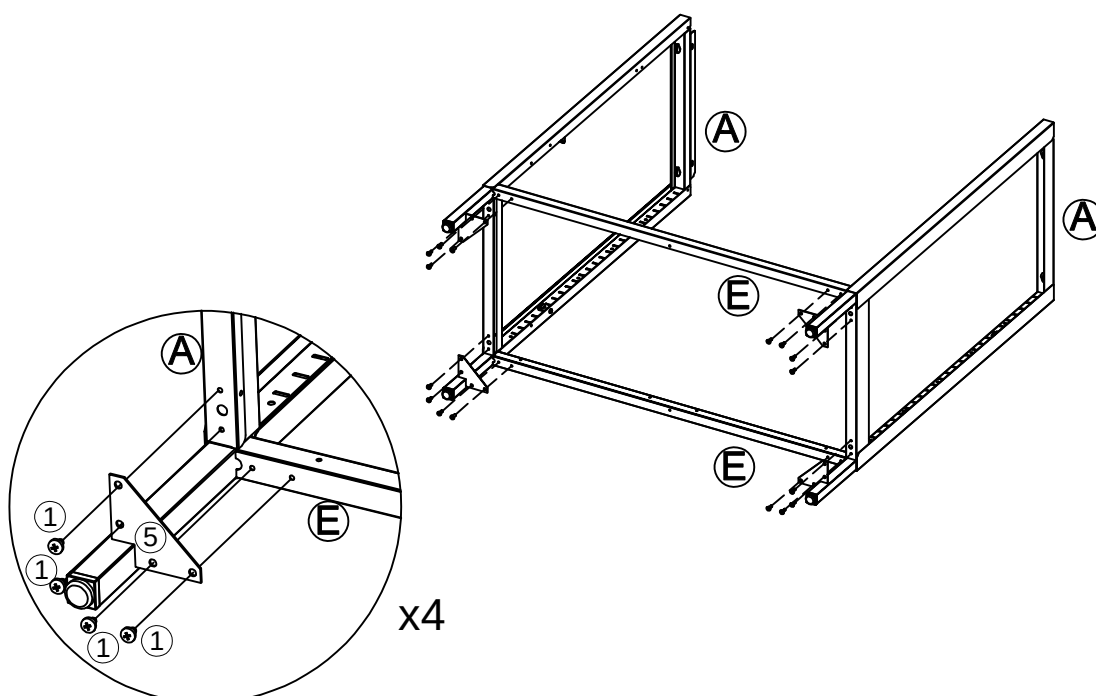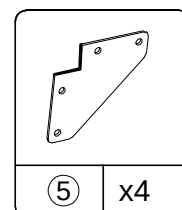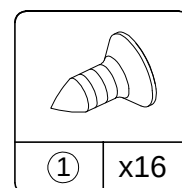



(3) - Attach (B1) & (B2) to (A) as below shown.

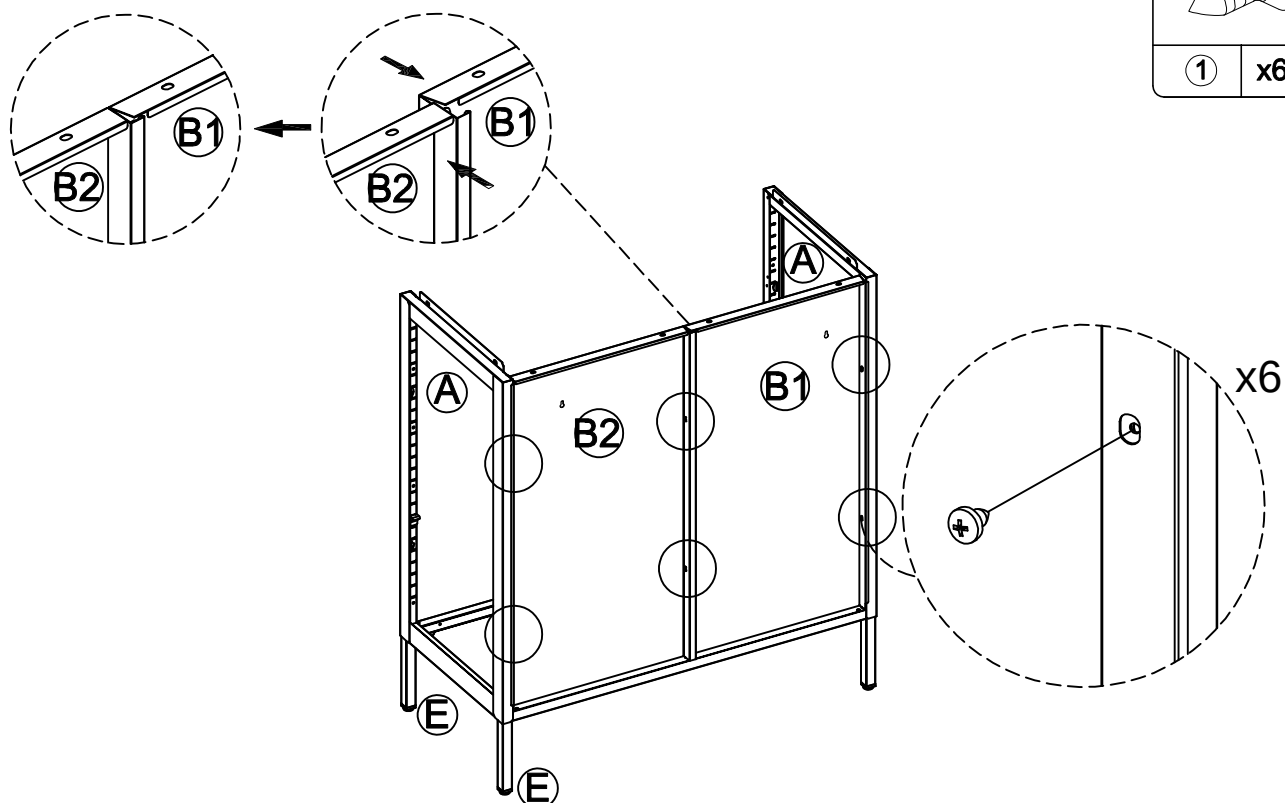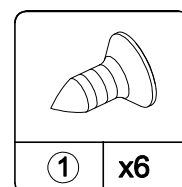



(4) - Attach (B) to (A) & (E) as below shown.

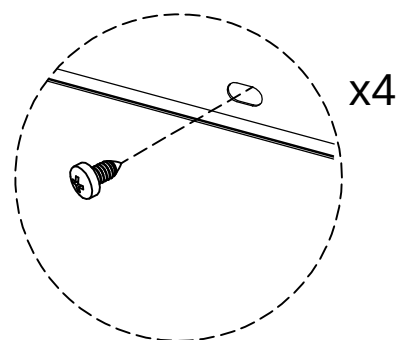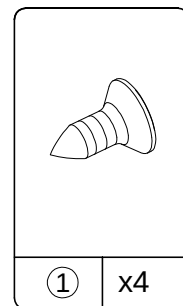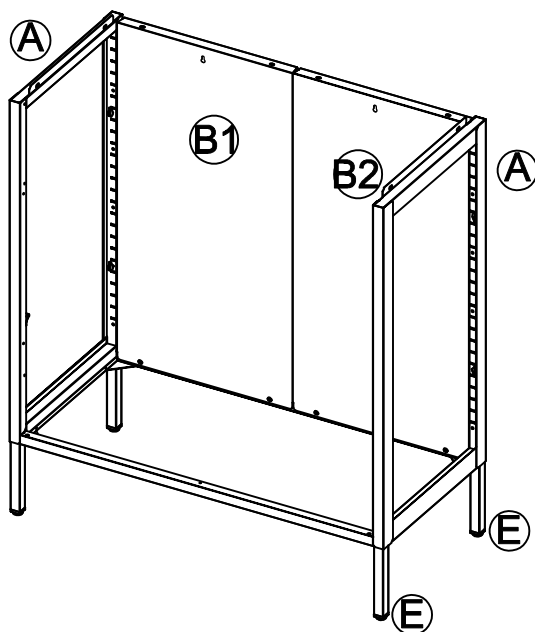



(5) - Attach (F) to (A) & (B) & (E) as below shown.

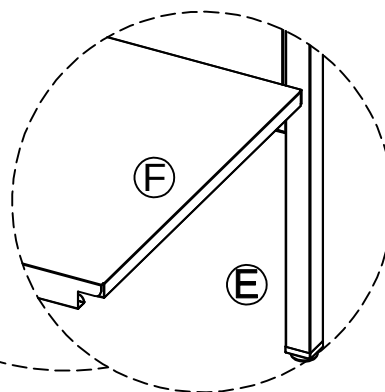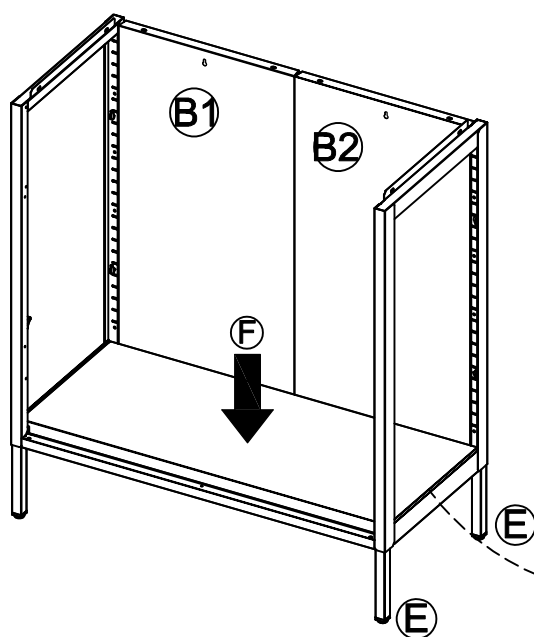



(6) - Attach (D) to (A) as below shown.

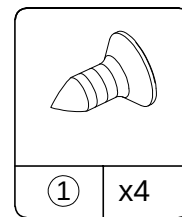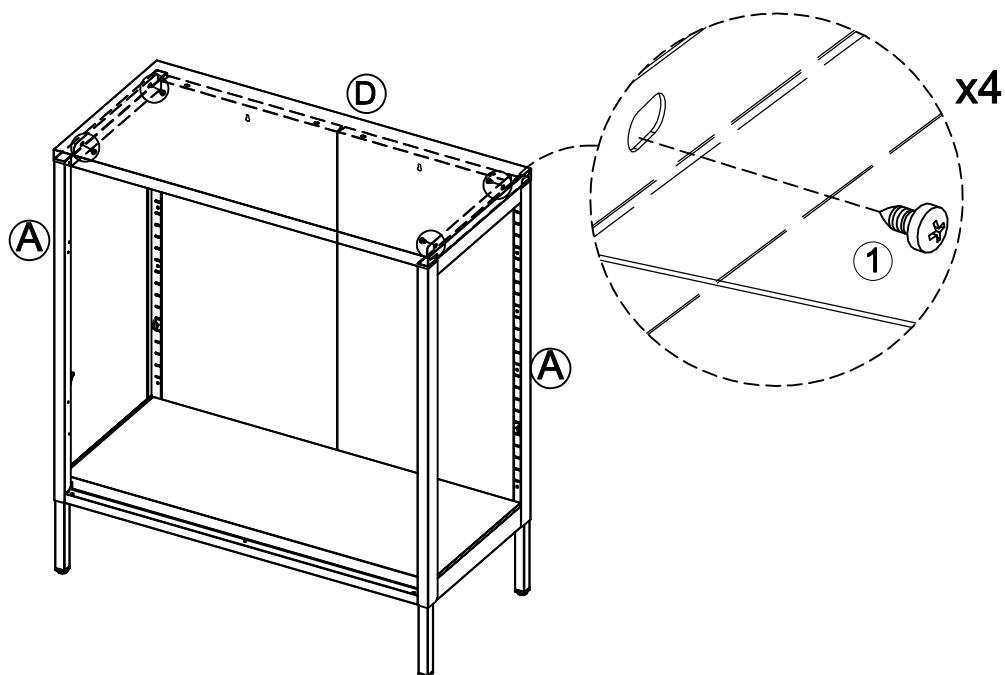





(7) - Attach (B) & (8) to (D) as below shown.

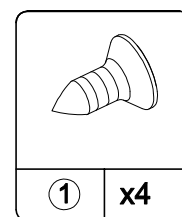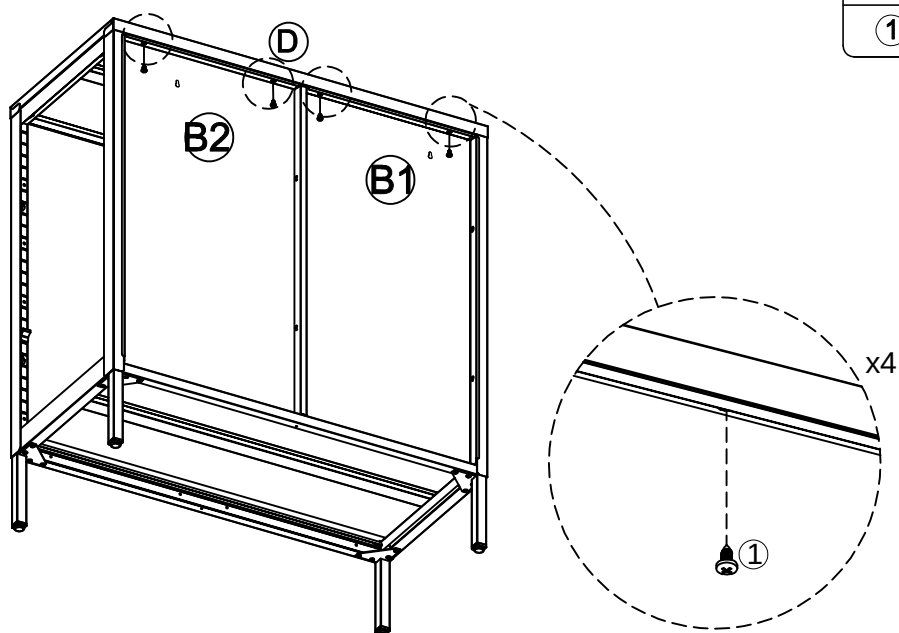





(8) - Attach (G) to pre-assembled unit as below shown.

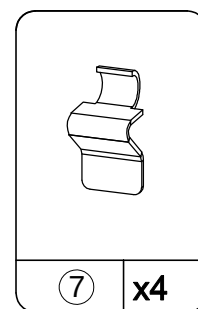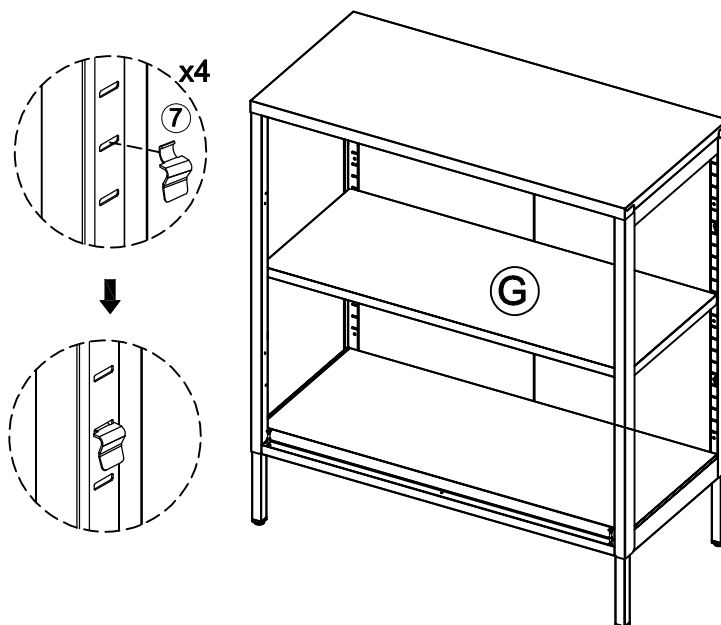


(9) - Attach (2) & (3) to pre-assembled unit as below shown.

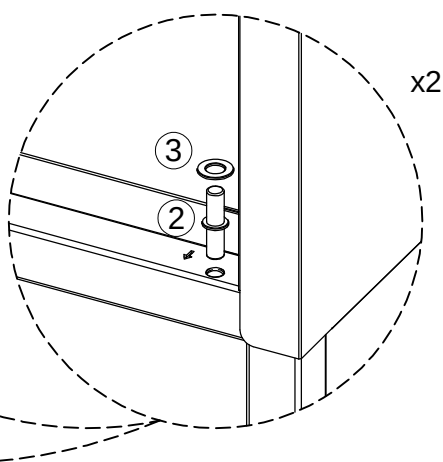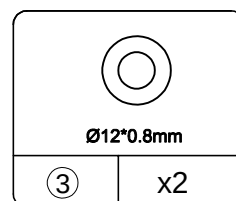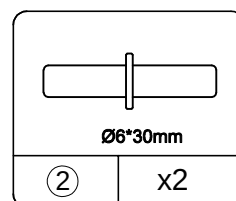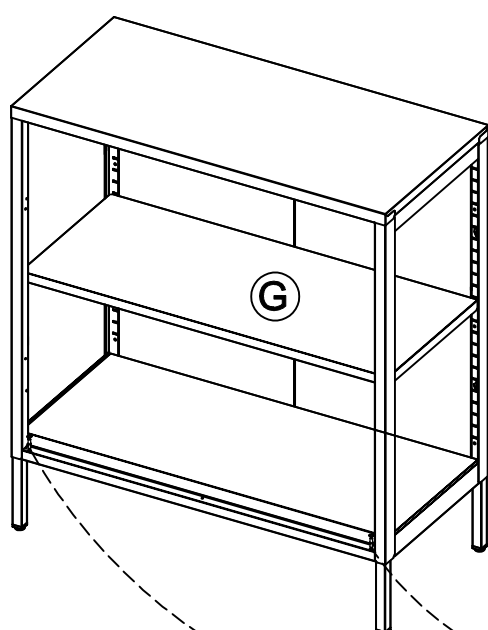


(10)- Attach (6) to (C) as below shown.

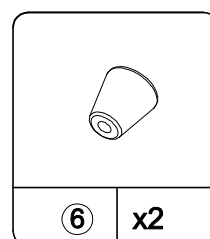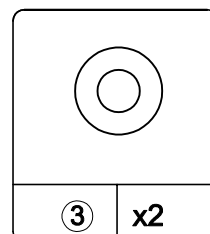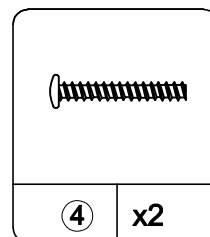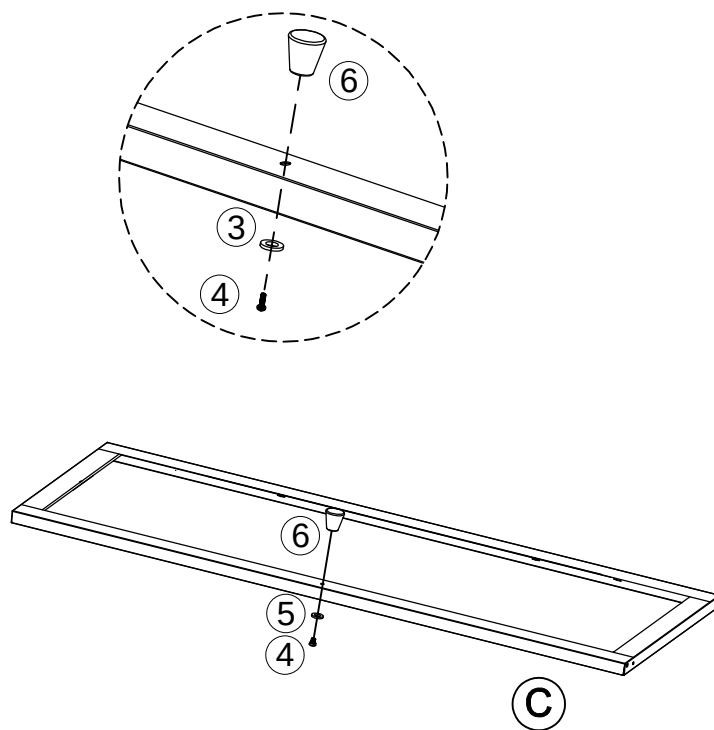


spare parts of glass buckle

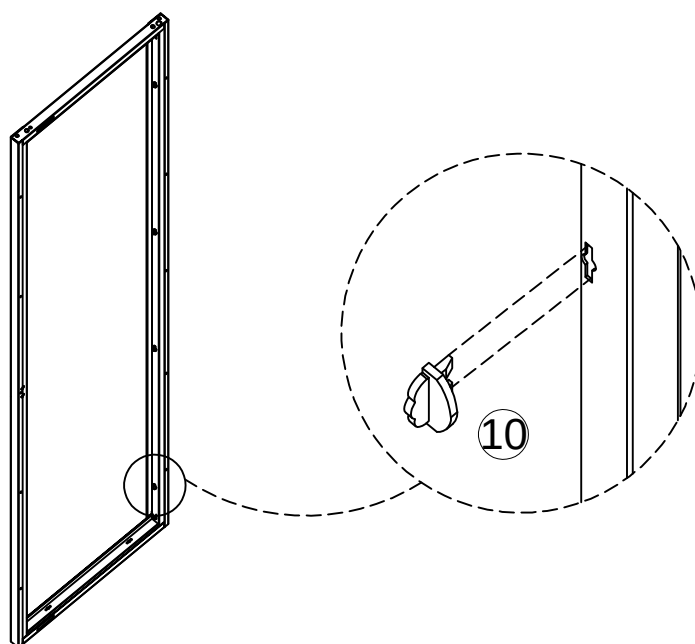

(11) - Attach (C) to pre-assembled unit as below shown.

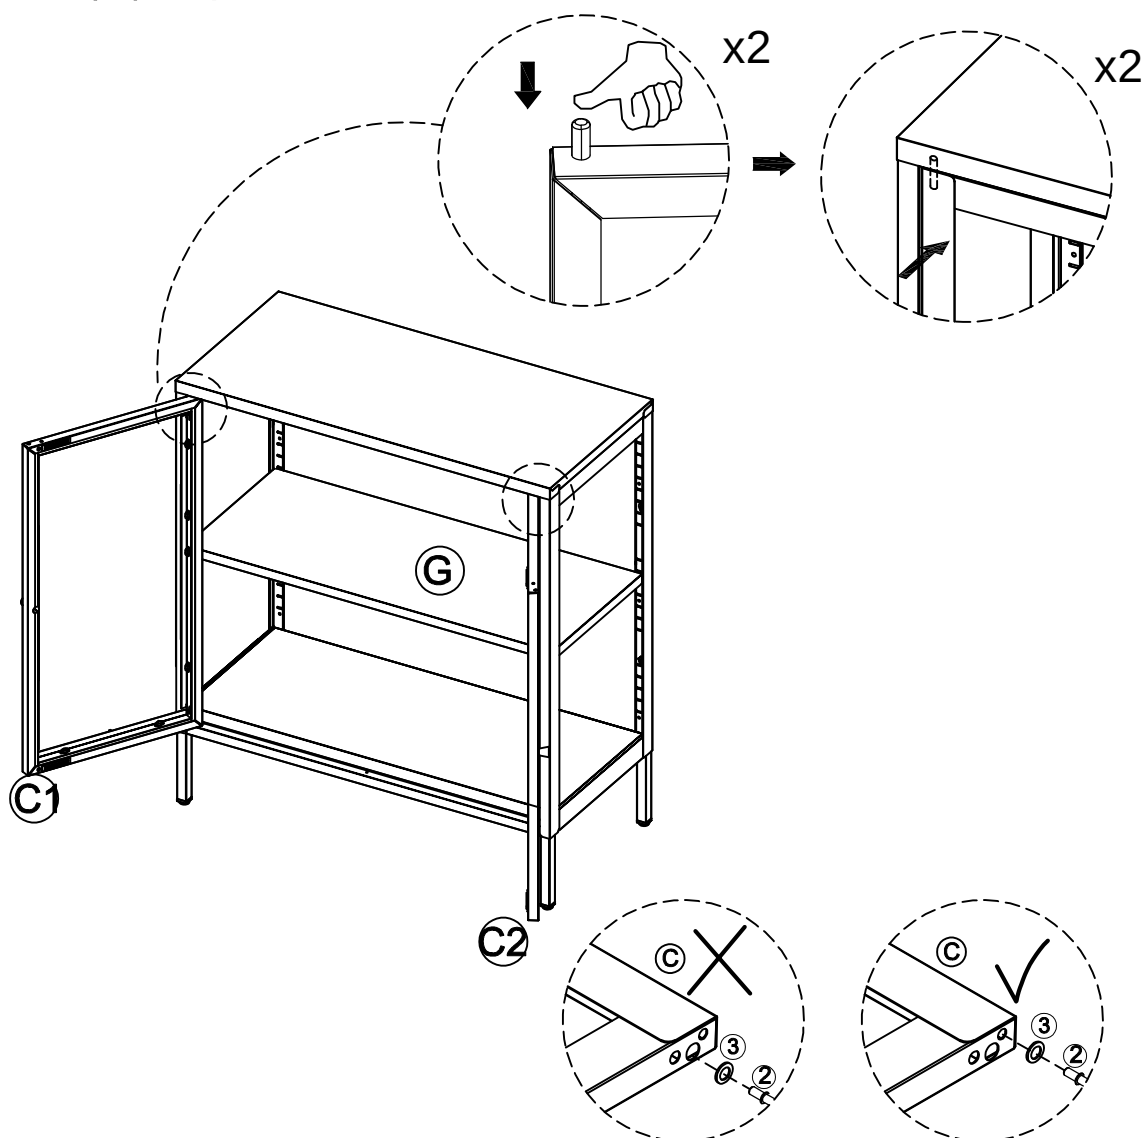


door assembly process

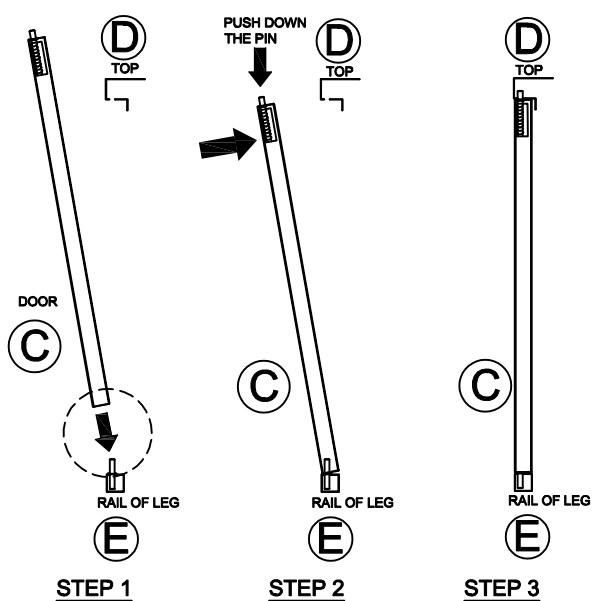




door dis-assembly process

WARNING

This step is just for taking door off !

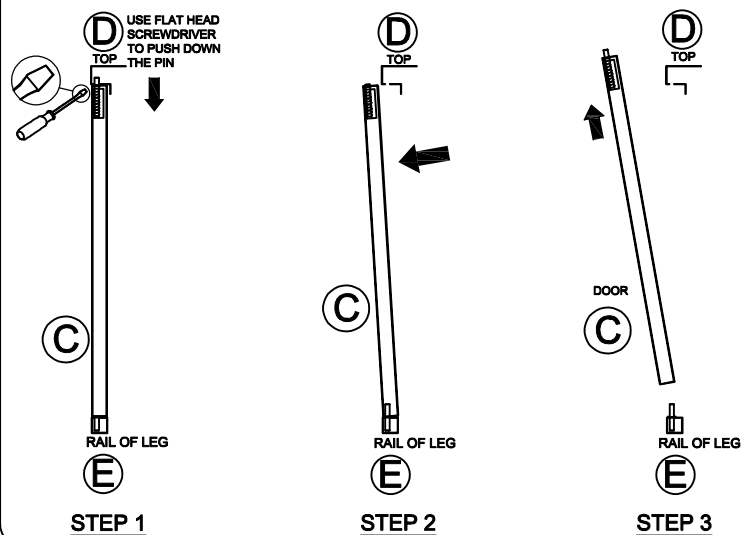

(12)

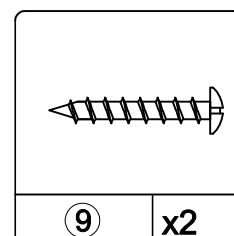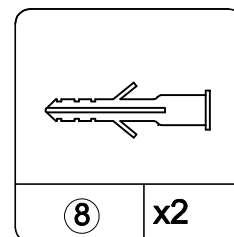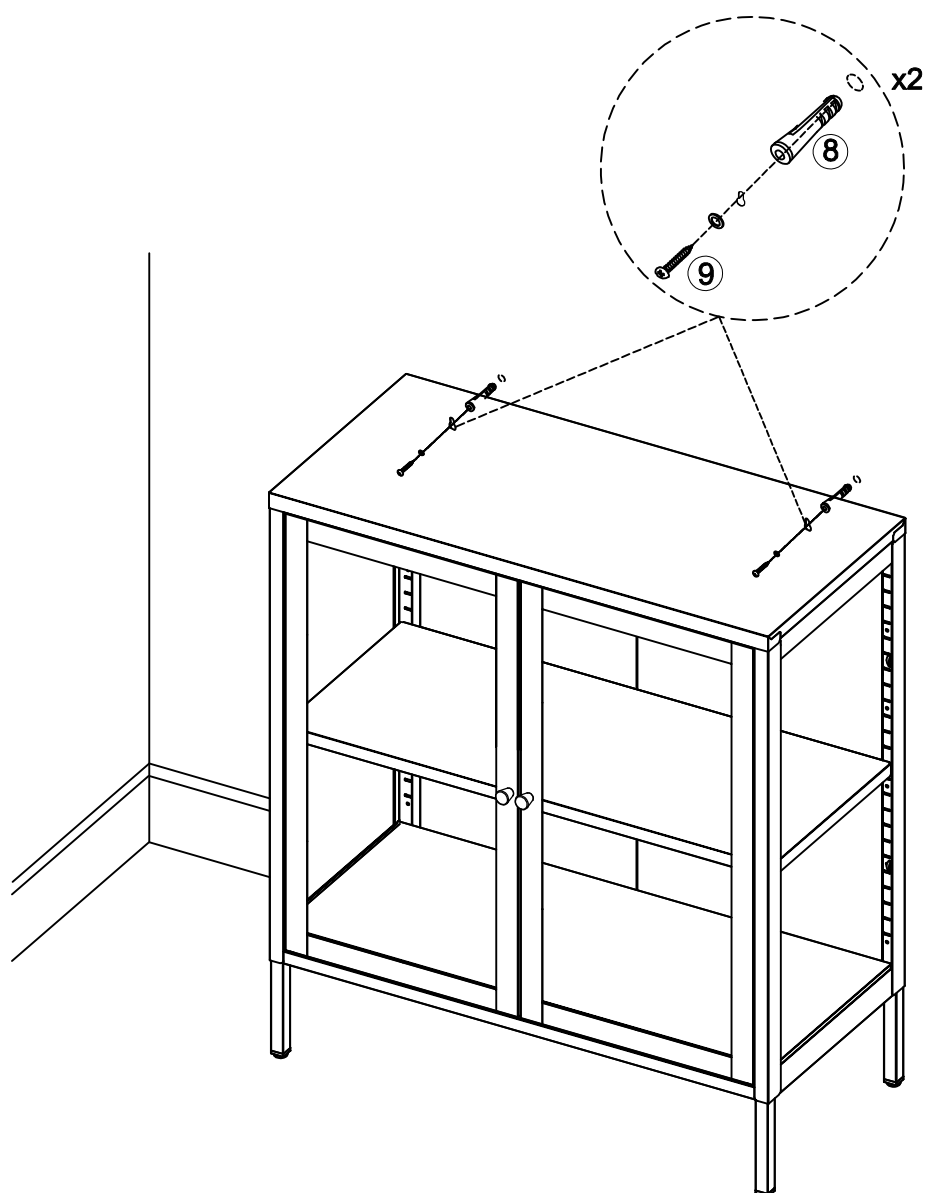

Gaps may appear between the top of the doors and the frame if the item is not on level ground; use the plastic foot cover to level.